# **RR-2760**

# **SPECIFICATION**

#### Features

## **Host Adapter Architecture**

- → PCI Express 2.0 x16
- → 6 Internal Mini-SAS port for 24 HDD
- \* RAID 0,1,5,10,50 and JDOB

#### Maintenance and Management Settings

- RAID Array Roaming
- → Unplug/Remove RAID array
- → Hot key (ctrl-h) boot-up RAID manager via BIOS
- → Firmware update while running the Operating System
- Verify RAID Array for Bad Sectors and Parity Check
- → Task Scheduler
- Automatic RAID rebuild
- → Automatic drive (insert / removal) detection
- → Hot Spare Disk
- → Staggered Drive Spinup
- Rebuild Priority (Low Highest)
- Spin Down Idle Mode
- → Hot Swap and Hot plug
- Bad sector repair and remapping to
- reduce dropped drives
  Multiple RAID array
- Multiple Logical Drive
- 64bit LBA support greater than 2TB per volume

#### **RAID Management Utilities**


- → Command Line Interface (CLI)
- Web browser-base RAID management software
- API

#### Operating System Support

- Windows Vista, 2008, 7(32/64 bit)
- Windows 2003, XP(32/64) bit
- → Linux 1.0
- → FreeBSD 1.4

#### **RAID Monitoring Tools**

- SMTP for email notification
- Alarm / Buzzer alerts for drive failure
- → SES-2 enclosure management (Failed, SMART (SHI))
- Enclosure management support I2C
- Hard Drive LED indicators (Activity and Failed)
- SHI (Storage Health Inspector Drive analysis from S.M.A.R.T)
- Event Log

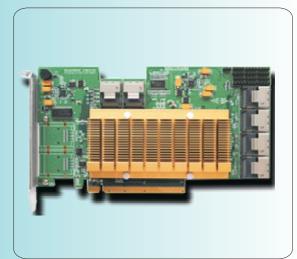

RR-2760

# **Package Contents**

- → Controller Card
- → Quick installation guide
- Software CD including Drivers, RAID management and User's Guide
- Supplied with 6 of any one of the following cables
  - → Mini SAS int to MINI SAS int
  - Mini SAS int to 4 \* SATA 7 PIN
  - Mini SAS int to 4 \* SAS 29 PIN + POWER

### **Operating Voltage**

→ 3.3V (4W max) / 12V (1W max)



Prime Source Technologies Pvt. Ltd. Web site: www.primesource.in